
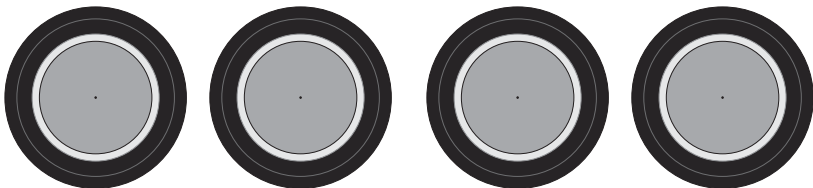




use this part is not necessary
if you are going to make fixed
wheels

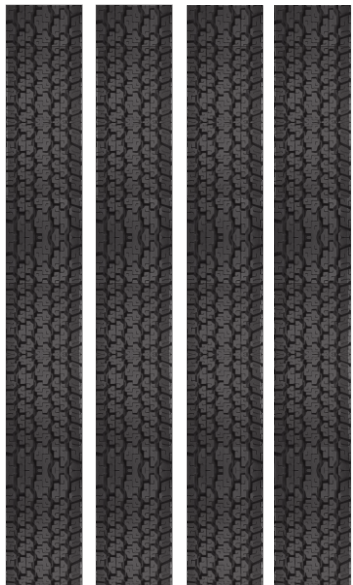




If you prefer to make free wheels, just put an 3 or 3,5mm shimm under the axles

axle bases



axle covers

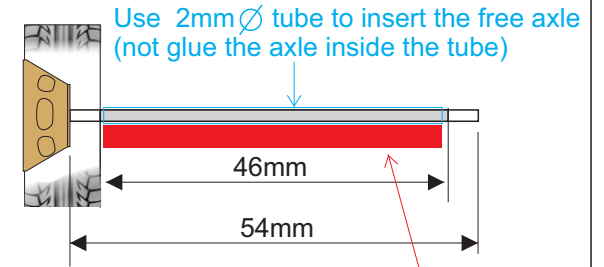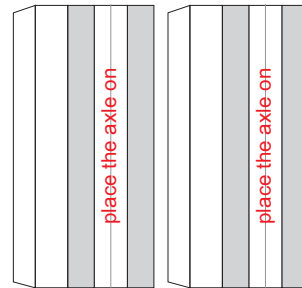









Place a 3mm spacer under the axle tube
to keep the correct position of suspension
(or use the axle bases)

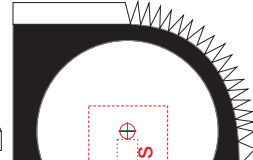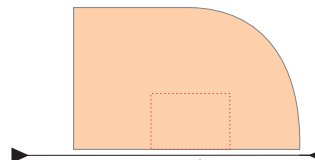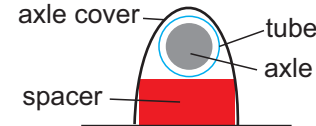

cut this table if you are
going to make free wheels

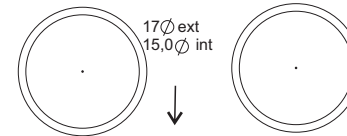

GOODYEAR

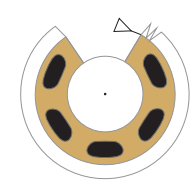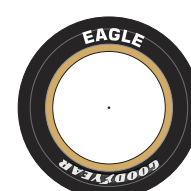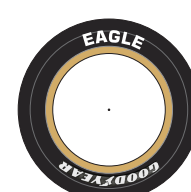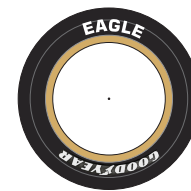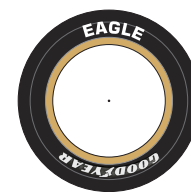

to glue on 1mm
paper card to make bolts